



WEDDINGMIX™

help@storymixmedia.com

800.831.1649

Canon Pro Camera & Equipment Information

Thank you for using our editing services for your wedding video. Remember you must return the included equipment to a FedEx Office within 3 business days after your wedding or a late fee of \$25/day will be applied.

Included Equipment

- | | |
|--|---|
| <input type="checkbox"/> Canon Pro Camera w/ 2 Batteries & Battery Charger | <input type="checkbox"/> LED Light w/ Batteries & Battery Charger |
| <input type="checkbox"/> Microphone (AA Battery Included) | <input type="checkbox"/> 16GB Memory Card (already in camera) |

Camera Setup

- | | | |
|---|---|--------------------------|
| - Power with On/Off button | - Open LCD screen | - DO NOT change settings |
| - Uncover lens by flipping switch on left side of lens hood | - Double check that Mic is plugged into Mic input | |



Mic On/Off

Power On/Off

LCD Screen Opening



Start/Stop Button

Mic Input

Tips

- Have spare AA batteries on hand for the microphone, and the spare battery and charger for the camera and light in case of an emergency or if battery life is low. The camera batteries record for approximately 3 hours (see battery setup below)
- Keep camera on Auto Focus (AF) Mode, if setting gets changed, switch it back using the AF/MF button on the left side of the LCD Touchscreen (see below). Take pictures by pressing “Photo” button on the screen (bottom left).
- DO NOT remove the microphone OR the light, as these can easily be misplaced and customer will be subject to fines if items are damaged/lost

Battery & Release switch



Bottom of back of camera

AF/MF button




LCD Touchscreen

Photo button

- Adjust the LED light by loosening the arm mount located underneath the camera, reposition the light on the left side (as shown), tighten to leave in place (same with mount under light).

- Power LED light on by pressing the On/Off switch located on the back of the unit

Lens cover switch

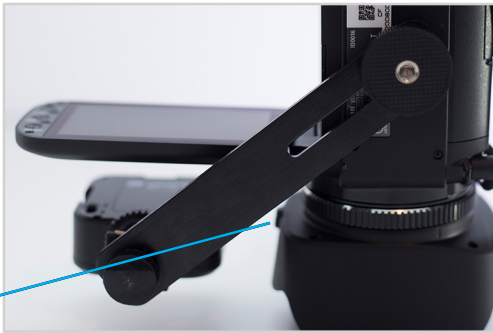

Bottom of front of camera

- Microphone cord should already be plugged into the Mic input, located directly under the right side of the handstrap. Power it on by pressing the On/Off switch located on the back left side of the unit (turn off when not using the camera)



Boom microphone

Mode switch



Back of camera

Start/Stop button

- Keep camera in Manual Mode (M) at all times. (switch located above the record button)
- DO NOT change any of the settings under any circumstances